



# Dell Inspiron 13z 5323 Battery Replacement

This guide will help you replace a faulty battery in the Dell Inspiron 13z 5323.

Written By: Chase Hussey



## INTRODUCTION

In this guide you will be shown in 4 easy steps how to remove and replace the battery in the Dell Inspiron 13z 5323.


---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

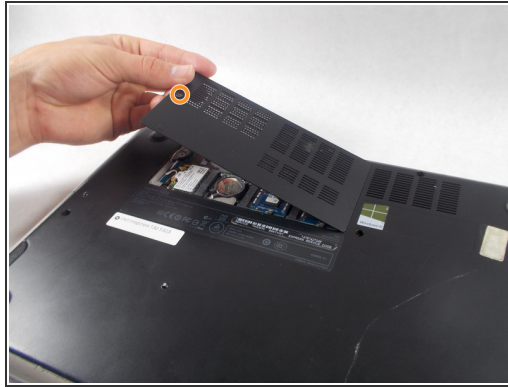

- Remove nine screws from the bottom case.
- The highlighted captive screw on the base cover is held in place with a washer, so when it is loosened and the cover is removed, the screw will stay in the plate.
- Once the captive screw is loosened, remove the small base cover on the bottom of the device.


## Step 2

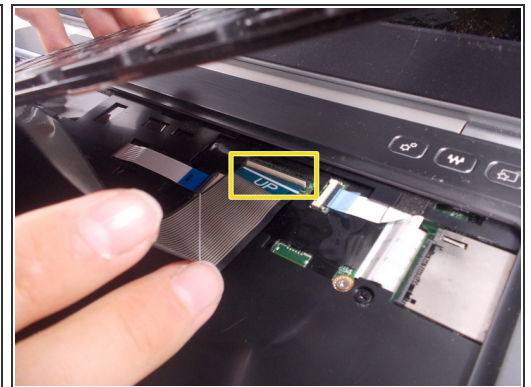

- There are 3 slots on the top of the keyboard where you will have to use a thin tool, such as a flathead screwdriver to push the tabs so the keyboard will pop out.
- ⚠ Be careful when pushing in the keyboard tabs, as they may break if they if too much pressure is applied to them.
- You will have to flip a small tab up where the ribbon connector goes into the insert, so the connector can be released and the keyboard can be removed.




## Step 3

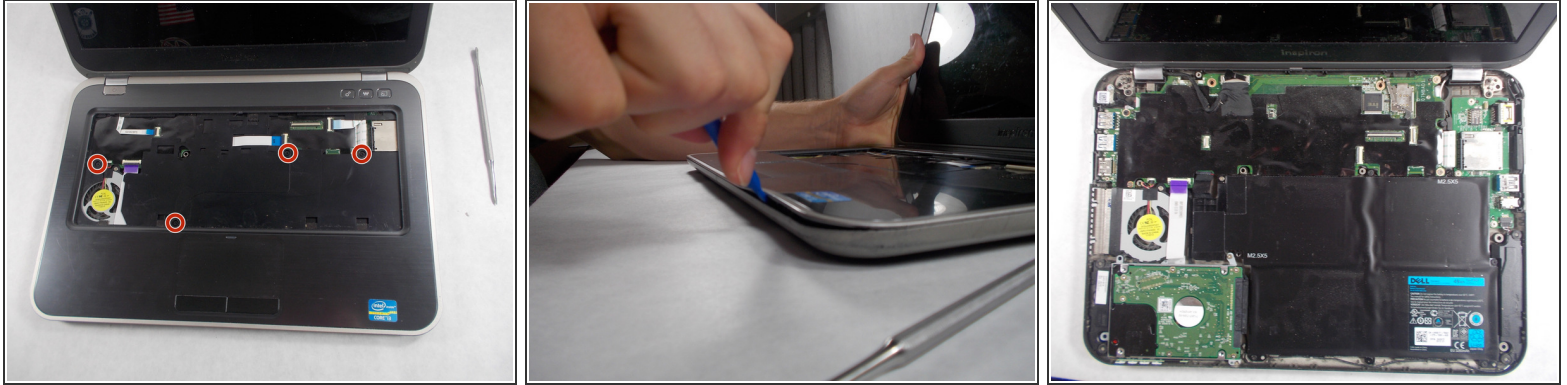

- Remove the highlighted 4 screws and then use the plastic separator to remove the palm rest.
- ⚠ Be careful when separating the palm rest from the laptop, because being too aggressive with it can cause the small clips that hold the palm rest in place to break .

## Step 4

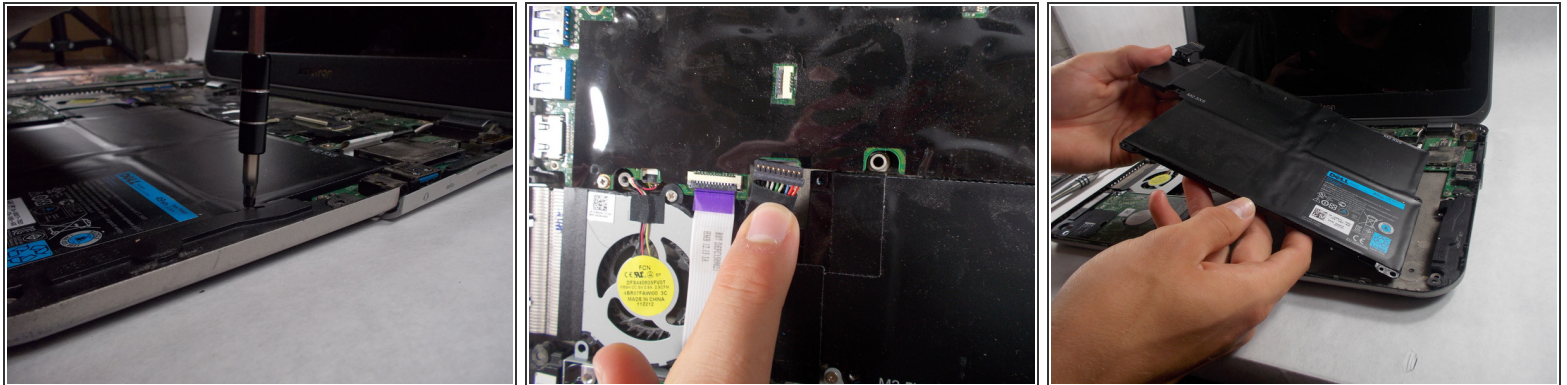

- Remove the screws surrounding the battery and unplug the cable in the top left corner to then remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-21 03:05:11 PM.